

USER MANUAL
SMOOTH OPERATOR

This user manual applies to Smooth Operator model numbers

FP-IND20003 Matte Black

FP-IND20004 Aqua Blue

FP-IND20005 Smash Pink

Congratulations on your Indecent purchase. Before using this product please read through this user manual carefully.

If you are unsure under any circumstance **do not use this product**. For more information or questions relating to this product email info@indecent.com.au

How Indecent are you?

The Indecent Quality

It is our mission at Indecent to provide high quality, body safe and comfortable toys for all adults to enjoy. To this end all our products are ethically sourced and manufactured, before being subjected to rigorous testing to ensure they meet our own high standards as well as the requirements to be registered as an Australian Responsible Supplier.

We are proud of our differences

As a company, we prioritise safety, quality and inclusivity. This has lead us to consider how we can make our products user friendly for everybody, while also undergoing rigorous testing to ensure we meet the highest safety standards for electronic products.

Indecent is proudly the world's first brand within the adult sector to register as an Australian Responsible Supplier.

To meet the guidelines for registration all our toys:

- Have been tested and passed strict Australian Electromagnetic requirements set out by the Australian Consumer Media Authority (ACMA).
- Proudly display this compliance by printing the RCM logo on all packaging, user manuals and our website.



The RCM is a visual indication of Indecent's compliance with all applicable ACMA regulatory arrangements, including:

- All technical and record-keeping requirements on every electrical product we sell
- Established recall processes
- Displaying the RCM logo where required
- Complete and available compliance folder storing our test reports

To search for our Responsible Supplier Registration, please follow the link below to the ERAC Australian government website to search for our registered products. Ensure Level 1 is ticked, type our Supplier Number E7677 and press enter.

<https://equipment.erac.gov.au/Registration/UserSearch.aspx?rr=Responsible&atn=public>

Building an inclusive brand

Indecent's collection of adult toys have been designed to ensure that sight impaired persons within our community are also able to use our products with ease. LED lights have not been included in any Indecent toy, instead all of our products have proudly been designed with Vibrating Charge Technology (VCT).

How does VCT work?

Vibrating Charge Technology allows the use of touch over sight when charging your toy. When the adult toy is placed on charged, it will vibrate (pulse) to indicate charging has started. When fully charged the toy will begin to vibrate. The vibration will continue every 5-10 seconds until the toy is removed from its power source.

Key points to follow before using Smooth Operator

 
Important

1. Read this user manual from start to finish.
2. Place Smooth Operator on charge. Refer to Charging the Smooth Operator.
3. Allow Smooth Operator to fully charge. Initial charge may take up to 1.5 hours.
4. Register Smooth Operator by visiting www.indecent.com.au
5. Clean and sanitise Smooth Operator before and after each use with specially formulated Indecent Antibacterial Mist.
6. After initial charge Smooth Operator may take up to 1 hour to recharge. When power of Smooth Operator is insufficient it will automatically turn off.
7. Smooth Operator can be charged as needed. The battery doesn't need to be depleted before charging. Only charge with USB cable provided using a trusted USB port.
8. For safety reasons Indecent toys will not operate while on charge.

Charging Smooth Operator –

When charging ensure Smooth Operator and USB charging cable is free from water or lubricant.

1. Gently insert charging cable into Smooth Operator.



2. Plug USB charging cable into USB port.
Smooth Operator will vibrate (pulse) to indicate charging has started.



3. Once fully charged Flexxi will begin to vibrate (pulse).



4. Vibration will continue every 5-10 seconds until removed from charging cable.




Smooth Operator Features

- 4 Unique Vibration Modes
- 3 Speeds
- Body Safe
- Water Resistant
- Up to 2 Hours Usage Time
- Vibrating Charge Technology (VCT)

Using Smooth Operator

1. Hold down Power Button for 2 seconds to turn On/Off.
2. Once turned on, Smooth Operator will begin on the first speed. Press Power Button to use second speed. Repeat to use third speed.
3. Press the Power Button past the third speed to change Vibration Mode. Continue to press Power Button to scroll through 4 Vibration Modes.
4. Use with Indecent Water Based Toy Lubricant for maximum enjoyment.
5. When using Smooth Operator take care and be aware of Smooth Operator positioning at all times.

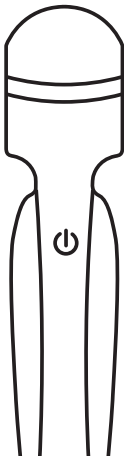

ALL INDECENT TOYS

Cleaning, Storage and Safety Information

- All Indecent toys are made using RoHS tested Silicone. For aesthetic enhancement some toy designs may include ABS plastic.
- Take care when using your toy for the first time.
- Clean your toy before and after each use with specially formulated Indecent Antibacterial Mist and allow to air dry.
- For a thorough clean carefully wash toy with soapy water, rinse, and then spray all over silicone areas with Indecent Antibacterial Mist and allow to air dry.
- If there is an excess of Antibacterial Mist on the toy use a clean soft cloth to wipe off.
- Do not use alcohol based products or undiluted detergents as this may damage the surface of your toy.
- Store your toy in the Indecent storage bag provided, as contact with plastic bags or other vibrators may cause damage to its surface.
- All Indecent toys are designed to be used with Indecent Water Based Toy Lubricant only as other lubricants may cause damage to its surface. This will compromise the toy quality and may void your warranty.
- **DO NOT use silicone based lubricants on any Indecent Toy.**

Rechargeable toys only

- Vibrating toys are electrical and motors may become warm with use. If you feel your toy is getting unduly warm, switch off and allow it to cool down.
- Take care when cleaning your toy, remember it is an electrical item and moisture can damage your toy.
- Be aware of water exposure to charging sockets/magnet plates when cleaning your toy, we recommend covering the sockets/magnetic plate with you finger while cleaning to minimise contact with excess water.
- Always allow your toy to cool down before storing in the Indecent storage bag provided.
- When charging this product ensure USB port/wall adapter/wall charger you use is approved and compliant with your country's electrical guidelines.
- Indecent will not be held liable for loss or damage suffered from using non-approved, non-compliant charging port/products. To check whether your product is registered please visit the ERAC government website.
- Indecent toys are water resistant and safe to use when in contact with water.
- Indecent toys are water (splash) resistant. Do not submerge your toys in water. Toys no longer operational due to water damage are not covered under warranty.

Warning

- Do not use under the influence of drugs or alcohol.
- This product is sold as adult novelty.
- When using any Indecent toy take care, use common sense and be aware of toy positioning at all times.
- Indecent will not be held liable for personal or property damage caused by misuse of product
- No medical claims are warranted or implied by using this product.
- If you are unsure or pregnant, please consult a Medical Practitioner before use.
- If irritation or discomfort occurs discontinue use and consult a Medical Practitioner.
- To avoid injury or aggravation of pre-existing conditions, do not use vibrators on swollen or inflamed areas, skin lacerations, or on skin that is bruised, chaffed and/or irritated.
- Follow the guidelines in this user manual as not doing so may void your warranty.
- This is not a children's toy. Adult use only. Not for use by persons under the age of 18.


Look after the world

Australia and New Zealand

When the time has come to dispose of your toy, please ensure that you do so in accordance with your local council requirements for treatment of end of life electrical and electronic equipment. For more information, please contact your local council.

Other countries

For customers in other countries abide by the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive.

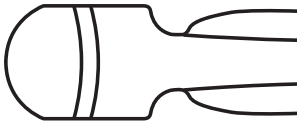

V1.02019